## DRIVEABLE BASE INSTALLATION INSTRUCTIONS

Part #BS-DR00



- 1. Drive the base in the ground approximately 2". Remove the base and dislodge the dirt from the bottom.
- 2. Using a drive cap and a sledgehammer, drive the base into the ground until 1" is left showing. You can also use a signpost driver with a driver cap. Do not use a sledge hammer directly on the base as it may bend and the unit will not fit into the base.
- 3. Make sure the unit you are installing is facing traffic and attach the unit with the four (4) 3/4" hex screws and washers that are included with the base.